



PREMIER LINK OPTION

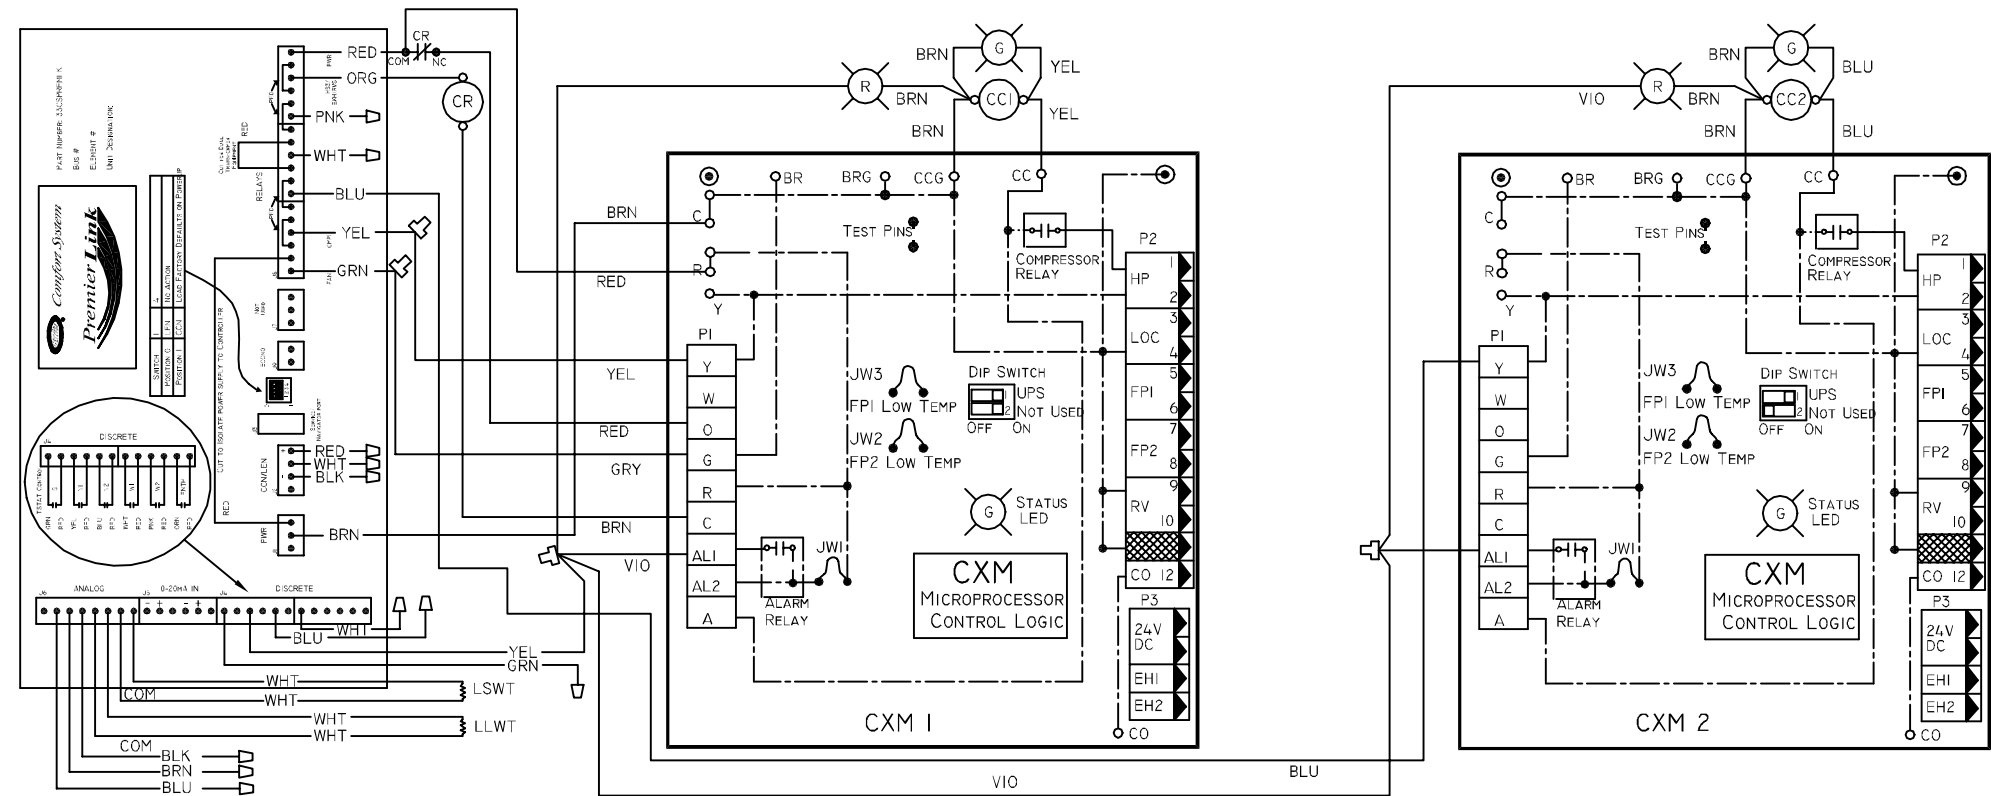

REFER TO PREMIER LINK START UP AND CONFIGURATION INSTRUCTIONS FOR CONTROL WIRING TO THE UNIT. LOW VOLTAGE WIRING MUST BE "CLASS 1" AND VOLTAGE RATED EQUAL TO OR GREATER THAN UNIT SUPPLY VOLTAGE

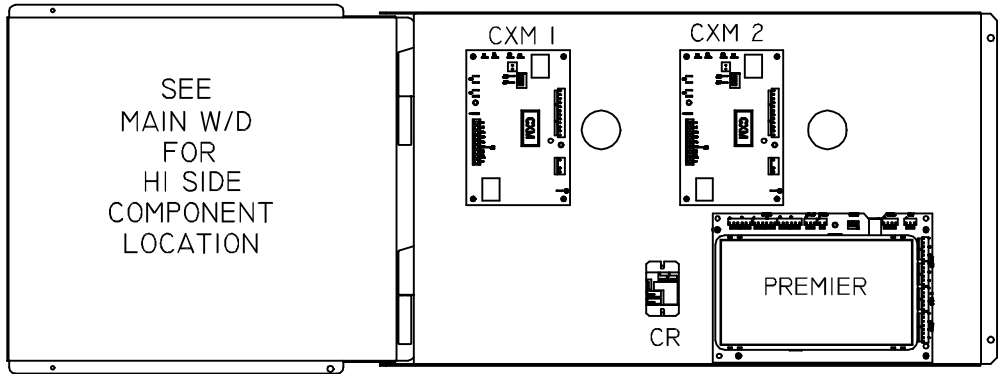

CONTROL BOX LAYOUT LOW SIDE