



 









 



 





 

 



LEGEND

- | | |
|---|-----------------------------|
|  | Factory Low voltage Wiring |
|  | Factory Line Voltage Wiring |
|  | Field Low voltage Wiring |
|  | Field Line voltage Wiring |
|  | Printed Circuit Trace |
|  | Optional Wiring |
|  | Optional Block |
|  | Capacitor |
|  | Circuit Breaker |
|  | Condensate Pan |
|  | Control Board Jumper |
|  | FUSE |
|  | Ground |
|  | High Pressure Switch |
|  | LED |
|  | Low Pressure Switch |
|  | Mate-N-Lock |
|  | Multi Splice Connector |
|  | Optional |
|  | Overload |
|  | Relay contacts - N.C. |
|  | Relay contacts - N.O. |
|  | Relay / Contactor Coil |
|  | Solenoid Coil |
|  | Splice Cap |
|  | Temperature Switch |
|  | Thermistor |
|  | Wire Nut |

NOTES:

1. Compressor and Blower Motor thermally protected internally.
2. All wiring to the unit must comply with NEC and local codes
low voltage wiring shall be Class 2 or equivalent.
3. Transformer wiring is voltage sensitive. Use layout corresponding to the unit voltage.
4. LTI provides low temperature protection for WATER. When using ANTI-FREEZE solutions, cut JW3 jumper.
5. Typical heat pump thermostat wiring shown. Refer to thermostat IOM for wiring to the unit. T-Stat wiring must be "Class 1" and voltage rating equal to or greater than unit supply voltage.
6. 24V Alarm signal shown. For Dry Alarm contact between AL1 & AL2, cut JW1 for CXM/DXM Gen2 or JW4 DXM.
7. Transformer Secondary Ground via CXM/DXM board standoffs and screws to Control Box.

BM6. Blower Motor is wired for Condenser water Reheat option with stage 1 Blower set on HIGH and stage 2 Blower set on LOW. For any other combination of speeds, at the motor attach BLK wire to the higher of the two desired speed taps and the blue wire to the lower of the two desired speed taps.

HUM1. Refer to HUMIDISTAT Installation application, and Operation Manual For Control Wiring to the unit.

HWG3. WSTAT is supplied with unit and must be wired in series with the hot leg to the pump. WSTAT is rated for voltage up to 277V.

LON1. Refer to LON, OR TSTAT Installation, Application, and Operation Manual for control wiring to the unit.

LON2. Optional LON wires. Only connect if LON connection is desired at the wall sensor.

LON6. Factory cut JW1 jumper. Dry Contact will be available between AL1 and AL2.

SAC1. Use Start Assist Capacitor only on unit size 006-012.

WHT3. In case of two white wires on the actuator, use white color wire labeled as 3-THREE.

