

PMP1. For Variable Speed pump control and diagnostic information refer to unit IOM
PMP2. For Variable Speed pump option, place jumper on PWM pins on P14.

- PMP1. For Variable Speed pump control and diagnostic information refer to unit IOM
PMP2. For Variable Speed pump option, place jumper on PWM pins on P14.

