


PMP1. For Variable Speed pump control and diagnostic information refer to unit IOM.
PMP2. For Variable Speed pump option, place jumper on PWM pins on P14.

- PMP1. For Variable Speed pump control and diagnostic information refer to unit IOM.
PMP2. For Variable Speed pump option, place jumper on PWM pins on P14.

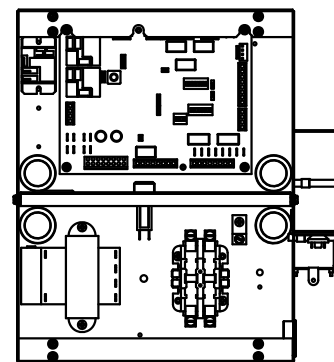

CONTROL BOX LAYOUT

SEE NOTE PMP2