


PMP1. For Variable Speed pump control and diagnostic information refer to unit IOM.  
PMP2. For Variable Speed pump option, place jumper on PWM pins on P14.

- PMP1. For Variable Speed pump control and diagnostic information refer to unit IOM.  
PMP2. For Variable Speed pump option, place jumper on PWM pins on P14.

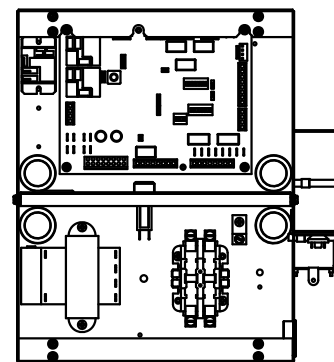

### CONTROL BOX LAYOUT

## SEE NOTE PMP2