

CONTROL BOX LAYOUT

-

SEE I.O.M. FOR DIP SWITCH DEFINITIONS

- | | |
|---|------------------------|
| 1 | UPS:DISABLED/ENABLED |
| 2 | STAGE2: 2/1 |
| 3 | NOT USED |
| 4 | DDC OUTPUT: DDC/NORMAL |
| 5 | FP 1/FP 2 FAULTS: 3/1 |

SEE I.O.M. FOR DIP SWITCH DEFINITIONS