

Wire

- BM1. Fan motors factory wired for Medium Speed. For High or Low speed remove BLU wire from fan motor speed tap 'M' and connect to 'H' for High or 'L' for Low.
- MPC2. Refer to MPC Installation application, and Operation Manual For Control Wiring to the unit.
- MPC3. ASW sensors are not required on Water-Water application. ASW06-ASW08 (Water-Air Only) move jumper to LSTAT, ASW13-ASW15 move jumper to Rnet.
- MPC8. Factory cut JW1 jumper. Dry Contact will be available between AL1 and AL2
- SAC3. Use Start Assist Capacitor only on unit size 015-018.

