

NOTES:

1. Compressor and Blower Motor thermally protected internally.
2. All wiring to the unit must comply with NEC and local codes  
low voltage wiring shall be Class 2 or equivalent.
3. Transformer wiring is voltage sensitive. Use layout corresponding to the unit voltage.
4. LT1 provides low temperature protection for WATER. When using  
ANTI-FREEZE solutions, cut JW3 jumper.
5. Typical heat pump thermostat wiring shown. Refer to thermostat IOM for  
wiring to the unit. T-Stat wiring must be "Class 1" and voltage rating equal to or  
greater than unit supply voltage.
6. 24V Alarm signal shown. For Dry Alarm contact between AL1 & AL2, cut JW1  
for CXM/DXM Gen2 or JW4 DXM.
7. Transformer Secondary Ground via control board standoff and/or Common  
to Control Box.

ECM1. For ECM Blower Motor air flow adjustment and diagnostic information refer to I.O.M.  
SAC3. Use start assist capacitor only on unit size 015-018.

