

AL	Alarm Relay Contacts
BM	Blower Motor
BMC	Blower Motor Capacitor
BR	Blower Relay
CAP	Capacitor
CB	Circuit Breaker
CC	Compressor Contractor
CDT	Compressor Discharge Temp Sensor
CO	Condensate Overflow Sensor
CR	Compressor Relay
CTB	Common Terminal Block
CS	Current Sensor
DHW	Domestic Hot Water
DISC	Disconnect
DM	Damper Motor
DTS	Discharge Temperature Switch
ES	End Switch
EWTS	Entering Water Temp Sensor
FP1	Sensor, low temp protection, water coil
FP2	Sensor, low temp protection, air coil
FSS	Fan Speed Switch
HP	High Pressure Switch
HPWS	High Pressure Water Switch
HR	Heating Relay
HWT	Hot Water Temp Sensor
JW	Jumper Wire
LAT	Leaving Air Temperature
LP	Loss of Pressure Switch
LOR	Lock Out Relay
LWTS	Leaving Water Temp Sensor
MOD	Modulating Water Valve
MS	Manual Starter
MSC	Multi Splice Connector
LT1	Sensor, low temp protection, water coil
LT2	Sensor, low temp protection, air coil
MWV	MotORIZED Water Valve
PB	Power Terminal Block
PDB	Power Distribution Block
POT	Potentiometer
PI	Field Wiring Terminal Block
RAS	Return Air Sensor
RVS	Reversing Valve Solenoid
SAC	Start Assist Capacitor
TB	Terminal Block
TRANS	Transformer
TS	Terminal Strip
UMT	Unit Mounted Thermostat

CONTROL BOX LAYOUT