
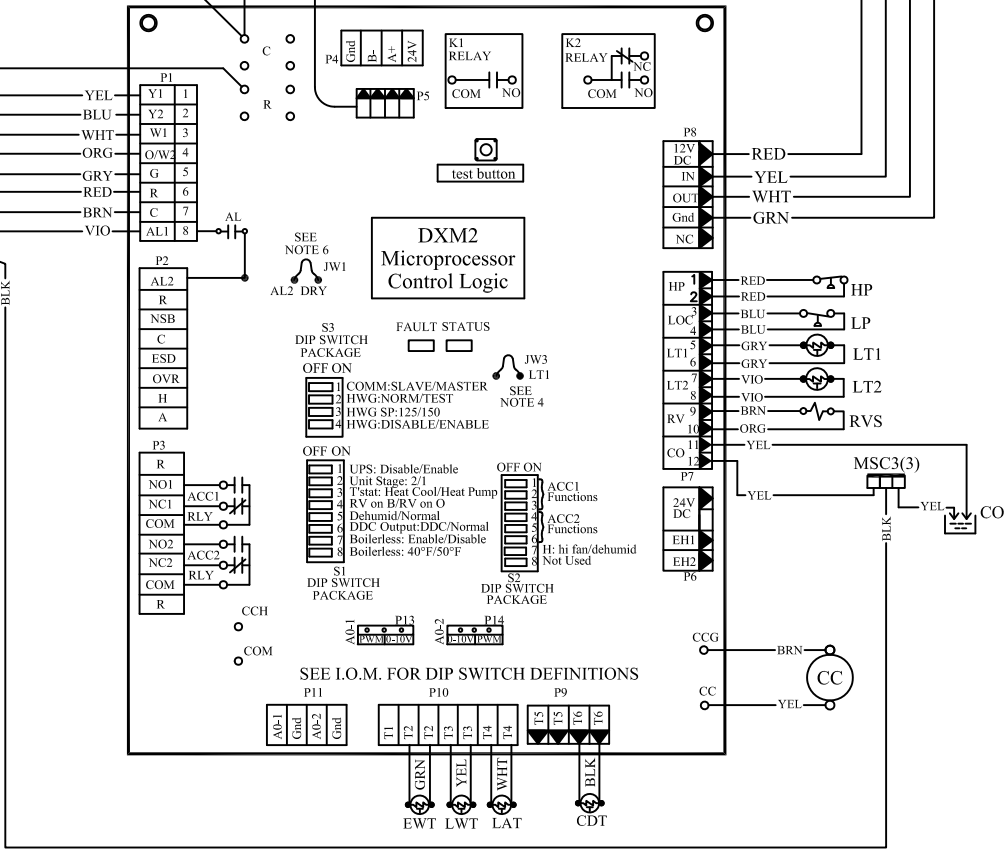
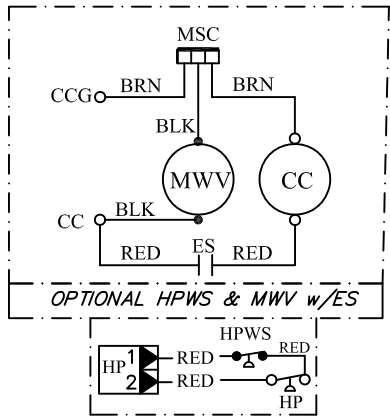
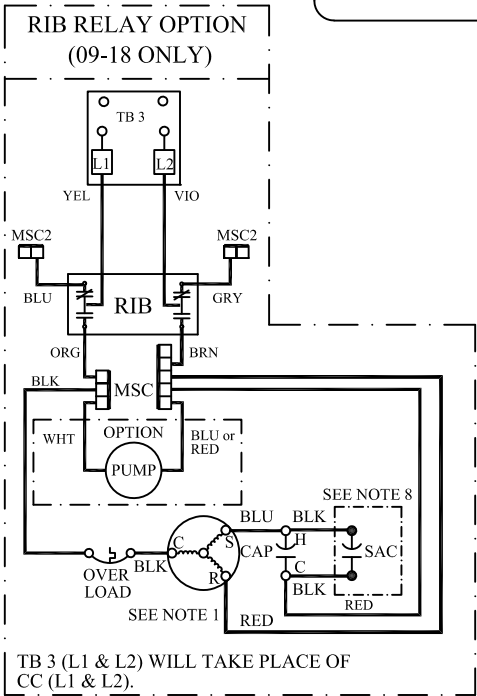
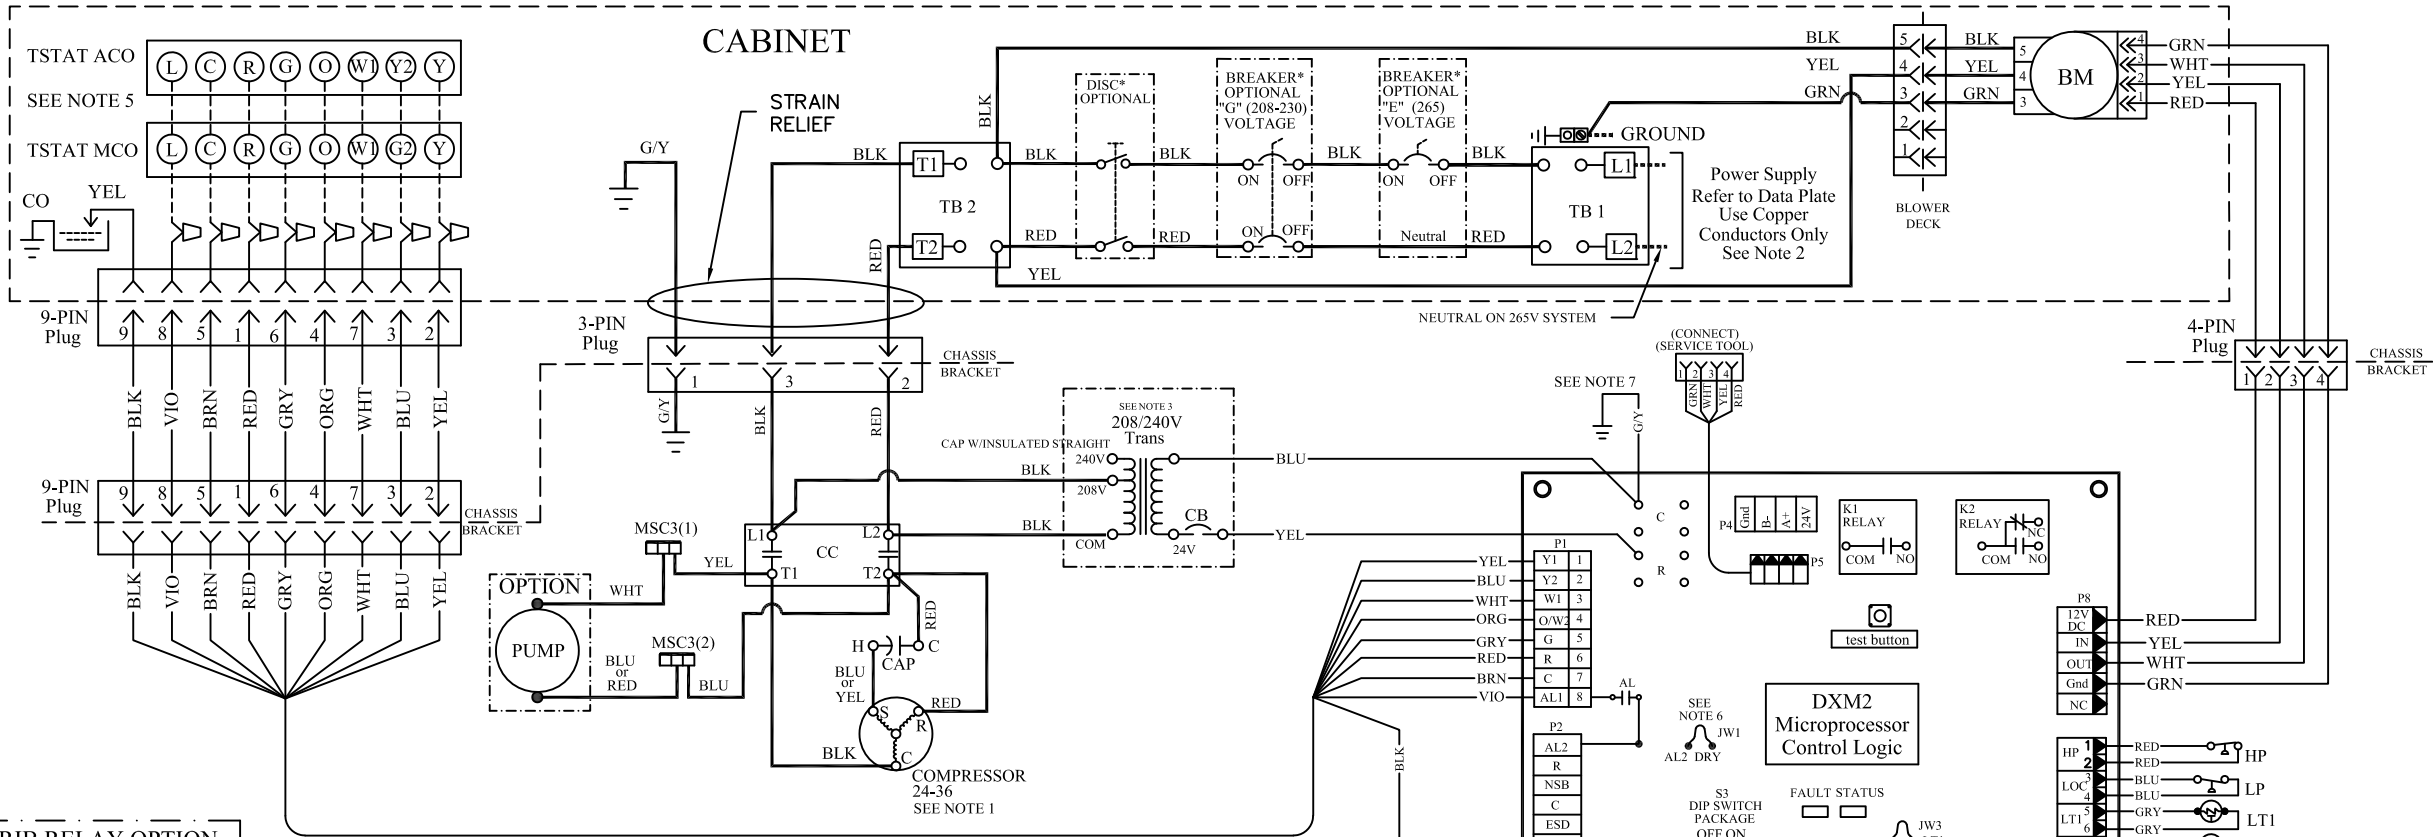


NOTES:

1. Compressor and Blower Motor thermally protected internally.
2. All wiring to the unit must comply with NEC and local codes  
low voltage wiring shall be Class 2 or equivalent.
3. Field Use Only: Transformer wiring is voltage sensitive. Use layout corresponding to the unit voltage.
4. LT1 provides low temperature protection for WATER. When using ANTI-FREEZE solutions, cut JW3 jumper.
5. Typical heat pump thermostat wiring shown. Refer to thermostat IOM for wiring to the unit. T-Stat wiring must be "Class 1" and voltage rating equal to or greater than unit supply voltage.
6. 24V Alarm signal shown. For Dry Alarm contact between AL1 & AL2, cut JW1 for CXM/DXM Gen2 or JW4 DXM.
7. Transformer Secondary Ground via control board standoffs and/or Common to Control Box.
8. SAC is factory provided for R410A chassis but not for R454B chassis.

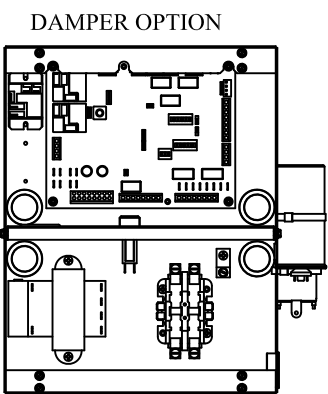

- |       |   |
|-------|---|
| ACO   | Automatic Change Over                   |
| AL    | Alarm Relay Contacts                    |
| ATS   | Air Temperature Sensor                  |
| BM    | Blower Motor                            |
| BMC   | Blower Motor Capacitor                  |
| BR    | Blower Relay / Blower Contactor         |
| CAP   | Capacitor                               |
| CB    | Circuit Breaker                         |
| CC    | Compressor Contactor                    |
| CDT   | Compressor Discharge Temperature        |
| CO    | Condensate Overflow Sensor              |
| CR    | Compressor Relay                        |
| CRC   | Compressor Run Capacitor                |
| CS    | Current Sensor                          |
| DHW   | Domestic Hot Water                      |
| DM    | Damper Motor                            |
| DTS   | Discharge Temperature Switch            |
| EEV   | Electronic Expansion Valve              |
| EHC   | Electronic Heat Contactor               |
| ES    | End Switch                              |
| ETC   | Electronic Temperature Control          |
| EWT   | Entering Water Temp Sensor              |
| FSR   | Fan Speed Relay                         |
| FSS   | Fan Speed Switch                        |
| HP    | High Pressure Switch                    |
| HPWS  | High Pressure Water Switch              |
| HR    | Heating Relay                           |
| JW    | Jumper Wire                             |
| LAT   | Leaving Air Temperature                 |
| LOR   | Lock Out Relay                          |
| LP    | Low Pressure Switch                     |
| LT1   | Sensor, low temp protection, water coil |
| LT2   | Sensor, low temp protection, air coil   |
| LWT   | Leaving Water Temp Sensor               |
| MCO   | Manual Change Over                      |
| MOD   | Modulating Water Valve                  |
| MS    | Manual Starter                          |
| MSC   | Multi Splice Connector                  |
| MWV   | MotORIZED Water Valve                   |
| NLL   | Night Low Limit Switch                  |
| PDB   | Power Distribution Block                |
| POT   | Potentiometer                           |
| P1    | Field Wiring Terminal Block             |
| PR    | Pump Relay                              |
| RAS   | Return Air Sensor                       |
| RVS   | Reversing Valve Solenoid                |
| SAC   | Start Assist Capacitor                  |
| SAS   | Supply Air Sensor                       |
| TB    | Terminal Block                          |
| TRANS | Transformer                             |
| UMT   | Unit Mounted Thermostat                 |
| VFD   | Variable Frequency Drive                |
| VSP   | Variable Speed Pump                     |
| WSTAT | Water Stat                              |