





























Legend	
--------	--

- | | |
|--|-----------------------------|
|  | Factory Low voltage Wiring |
|  | Factory Line Voltage Wiring |
|  | Field Low voltage Wiring |
|  | Field Line voltage Wiring |
|  | Printed Circuit Trace |
|  | Optional Wiring |
|  | Optional Block |
|  | Capacitor |
|  | Circuit Breaker |
|  | Condensate Pan |
|  | Control Board Jumper |
|  | FUSE |
|  | Ground |
|  | High Pressure Switch |
|  | LED |
|  | Low Pressure Switch |
|  | Mate-N-Lock |
|  | Multi Splice Connector |
|  | Optional |
|  | Overload |
|  | Relay contacts - N.C. |
|  | Relay contacts - N.O. |
|  | Relay / Contactor Coil |
|  | Solenoid Coil |
|  | Splice Cap |
|  | Temperature Switch |
|  | Thermistor |
|  | Wire Nut |


- | | |
|-------|---|
| ACO | Automatic Change Over |
| AL | Alarm Relay Contacts |
| ATS | Air Temperature Sensor |
| BM | Blower Motor |
| BMC | Blower Motor Capacitor |
| BR | Blower Relay / Blower Contactor |
| CAP | Capacitor |
| CB | Circuit Breaker |
| CC | Compressor Contactor |
| CDT | Compressor Discharge Temperature |
| CO | Condensate Overflow Sensor |
| CR | Compressor Relay |
| CRC | Compressor Run Capacitor |
| CS | Current Sensor |
| DHW | Domestic Hot Water |
| DM | Damper Motor |
| DTS | Discharge Temperature Switch |
| EEV | Electronic Expansion Valve |
| EHC | Electronic Heat Contactor |
| ES | End Switch |
| ETC | Electronic Temperature Control |
| EWT | Entering Water Temp Sensor |
| FSR | Fan Speed Relay |
| FSS | Fan Speed Switch |
| HP | High Pressure Switch |
| HPWS | High Pressure Water Switch |
| HR | Heating Relay |
| JW | Jumper Wire |
| LAT | Leaving Air Temperature |
| LOR | Lock Out Relay |
| LP | Low Pressure Switch |
| LT1 | Sensor, low temp protection, water coil |
| LT2 | Sensor, low temp protection, air coil |
| LWT | Leaving Water Temp Sensor |
| MCO | Manual Change Over |
| MOD | Modulating Water Valve |
| MS | Manual Starter |
| MSC | Multi Splice Connector |
| MWV | Motorized Water Valve |
| NLL | Night Low Limit Switch |
| PDB | Power Distribution Block |
| POT | Potentiometer |
| P1 | Field Wiring Terminal Block |
| PR | Pump Relay |
| RAS | Return Air Sensor |
| RVS | Reversing Valve Solenoid |
| SAC | Start Assist Capacitor |
| SAS | Supply Air Sensor |
| TB | Terminal Block |
| TRANS | Transformer |
| UMT | Unit Mounted Thermostat |
| VFD | Variable Frequency Drive |
| VSP | Variable Speed Pump |
| WSTAT | Water Stat |

NOTES:


1. Compressor and Blower Motor thermally protected internally.
2. All wiring to the unit must comply with NEC and local codes
Low Voltage Wiring shall be Class 2 or Equivalent.
3. Field Use Only: Transformer wiring is voltage sensitive. Use layout corresponding to the unit voltage.
4. LT1 provides low temperature protection for WATER. When using ANTI-FREEZE solutions, cut JW3 jumper.
5. Typical heat pump thermostat wiring shown. Refer to thermostat IOM for wiring to the unit. T-Stat wiring must be "Class 1" and Voltage Rating equal to or greater than unit supply voltage.
6. 24V alarm signal shown. For Dry Alarm contact between AL1 & AL2, cut JW1 for CXM/DXM Gen2 or JW4 DXM.
7. Transformer Secondary Ground via CXM/DXM board standoffs and screws to Control Box.

PMP1. For Variable Speed pump control and diagnostic information refer to unit IOM.
PMP2. For Variable Speed pump option, place jumper on PWM pins on P14.
TST4. Bundle and zip-tie unused wires in TSTAT harness when wiring for communicating TSTAT.

RIB RELAY OPTION

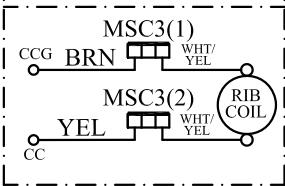

CONTROL BOX LAYOUT

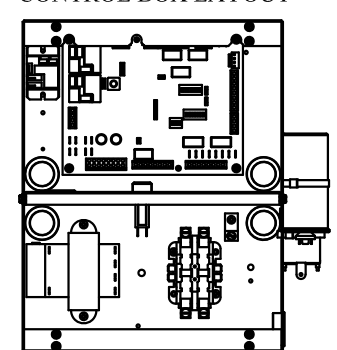

CABINET

